


FLAP POSITIONING SYSTEM

BASED ON A SCHEMATIC PRODUCED BY RV-8 BUILDER, KEVIN HORTON,
WWW.KILOHOTEL.COM

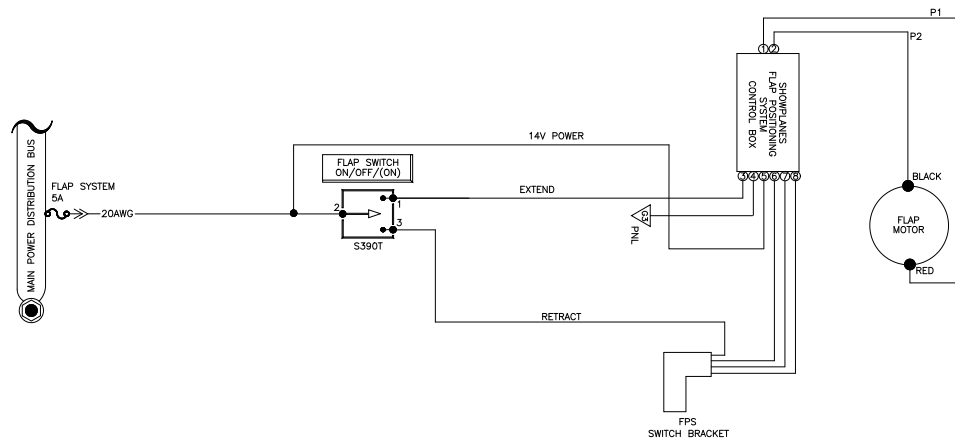

Note: For RV (4,6,7,9) connector motor P-1 to red wire and P-2 to black wire.

DRAFT

DRAFT

Note 1: Wires with no size indicated are supplied with, and permanently attached to, relevant components

Note: Showplanes E3 Flap Positioning System. To lower flaps press the flap switch down momentarily.

To raise flaps press the flap switch up. Once flaps have fully retracted the switch can be reset to the middle neutral position (The flap motor will shut down automatically, so resetting switch is not time sensitive.)

REV F 13/04/06

Figure D-4. Flap Positioning System

www.rvproject.co.uk